


**PAS-361  
Air Marking Pen**

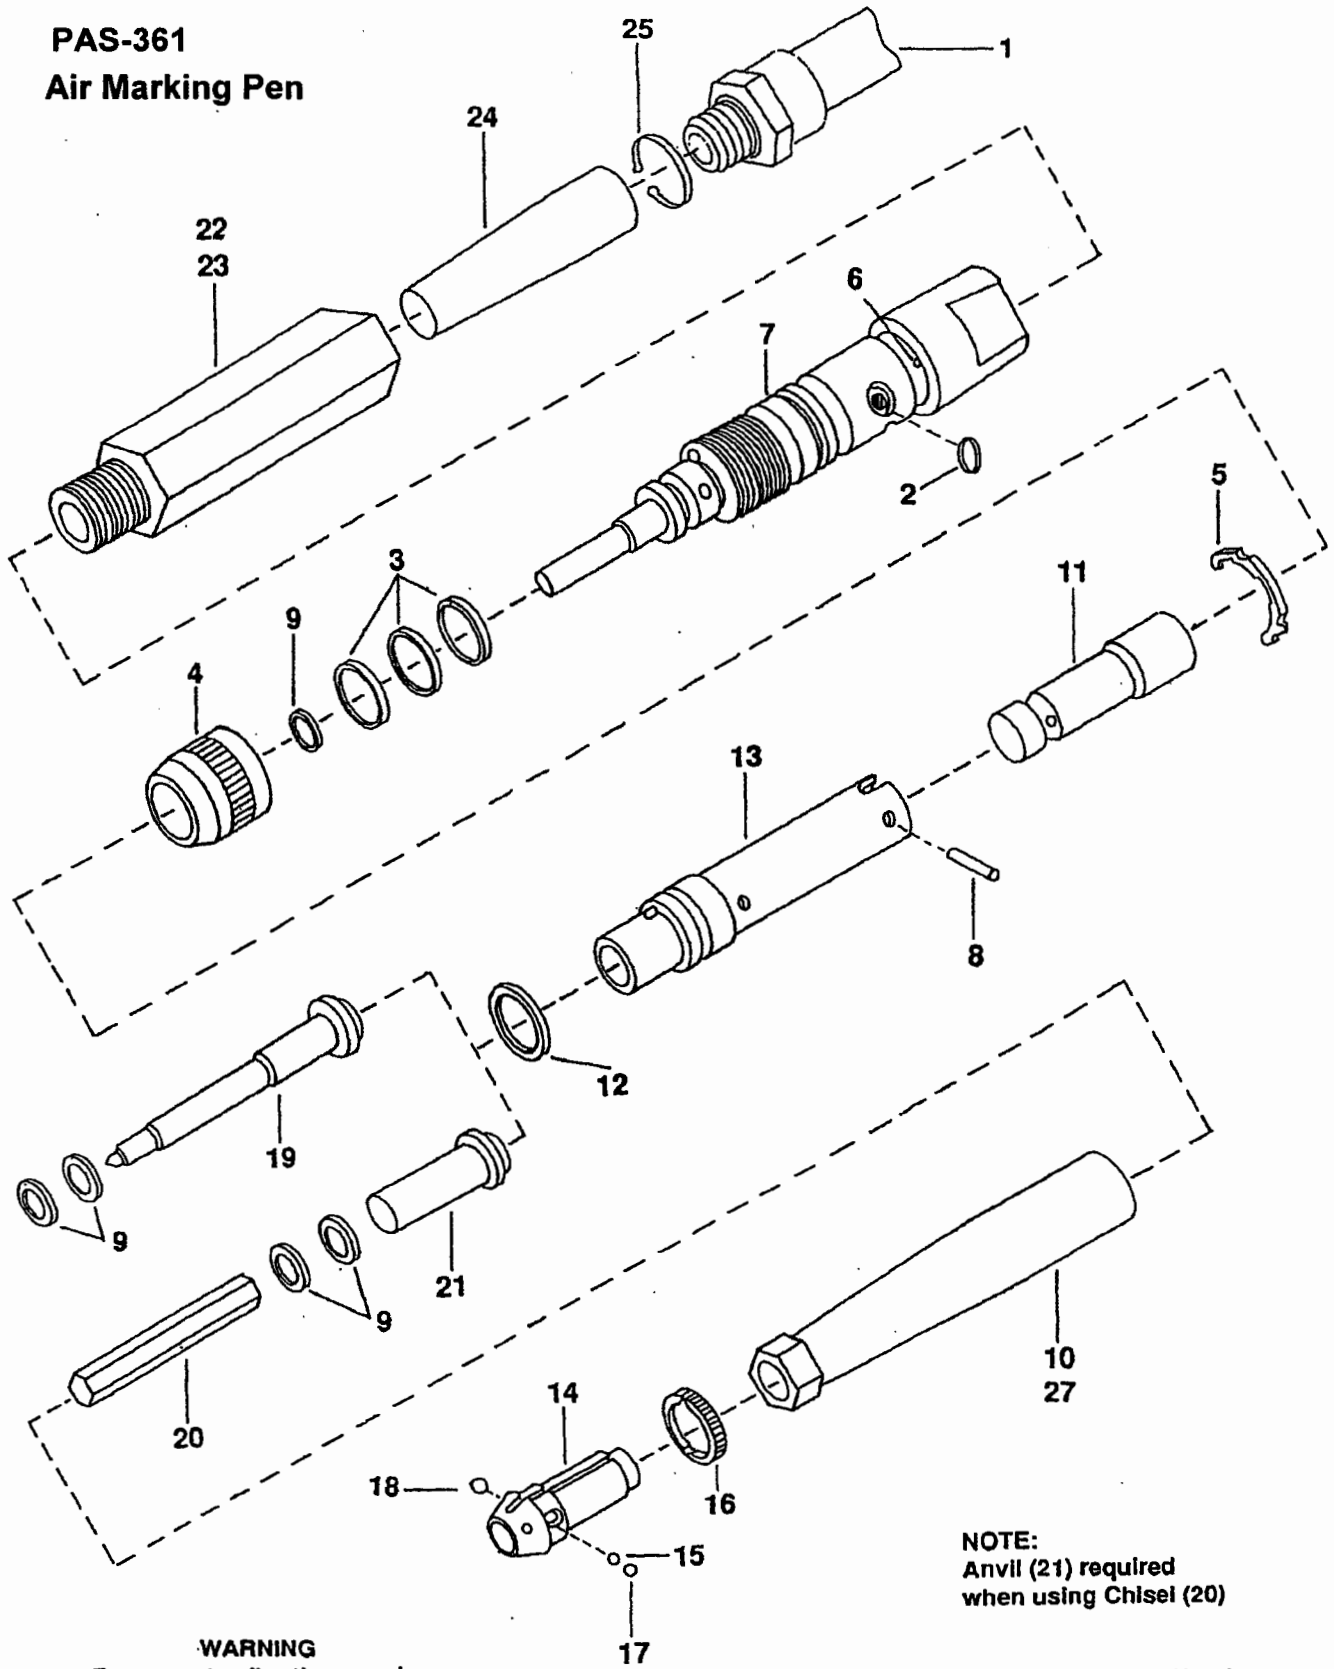

**WARNING**  
Exposure to vibration may be  
harmful to hands and arms.

**NOTE:**  
Anvil (21) required  
when using Chisel (20)

**All Threads Right Hand**

**PAS-361**  
**Air Marking Pen**

**PATCO AIR TOOL**

www.patcoairtools.com

800-727-2201

Index	Description	Qty	Part No.	C.P. Cross Ref. No.
1	Air line	1	7886	P-043886
2	O-ring	1	7919	P-059919
3	O-ring	3	7777	A-082777
4	Throttle sleeve	1	7175	P-054175
5	Retaining ring	2 halves	7187	P-054187
6	Roll pin	1	7685	G-071685
7	Inlet	1	7173	P-054173
8	Roll pin	1	7079	CA-092079
9	O-ring	3	7076	P-083076
10	Cylinder sleeve	1	7180	P-054180
11	Piston	1	7208	P-122208
12	O-ring	1	7071	P-083071
13	Cylinder	1	7174	P-054174
14	Bushing accessory	1	7181	P-054181
15	O-ring	1	7009	CA-055009
16	Lock ring	1	7186	P-054186
17	Retaining ball	1	7821	S-000821
18	Retaining ball	1	7613	S-008613
19	Stylus	1	7177	P-054177
20	Chisel blank	Not included	7184	P-054184
20A	Round nose chisel (not shown)	Not included	7182	P-054182
20B	1/4" Flat chisel (not shown)	Not included	7183	P-054183
21	Chisel anvil	Not included	7207	P-054207
22	Air filter assembly (Incl. 23, 24, 25)		7381	P-056381
23	Air filter body	1	7379	P-056379
24	Filter cartridge	1	7380	P-056380
25	Retaining ring	1	7432	P-056432
27	Cylinder sleeve Assm. (Incl.10,14,15,16,17,18)		7979	P-057919
Not Shown	Carrying case	1	7999	
Not Shown	Repair kit (Incl. 2, 3, 8, 9, 12, 15, 24)	Not included	7264	P-059264
Not Shown	Chisel kit (Incl. 9, 20,20A,20B 21)	Not included	7425	P-058425

## GENERAL INSTRUCTIONS

### Air marking pen

#### SAFETY INSTRUCTIONS:

1. Stay alert. Watch what you are doing, and use common sense when operating a pneumatic tool. Do not use a pneumatic tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattentions while operating pneumatic tools may result in serious personal injury.
2. Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
3. Avoid accidental starting. Be sure the trigger is off before connecting to the air supply. Carrying pneumatic tools with your finger on the trigger, or connecting pneumatic tools to the air supply with the trigger on, invites accidents.
4. Remove adjusting keys or wrenches before turning on the tool. A wrench or key that is left attached to a rotating part of the tool may result in personal injury.
5. Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.
6. Use safety equipment. Always wear ANSI-approved safety glasses underneath a full-face shield, gloves and hearing protection.
7. Always shut off air supply and disconnect the tool from the air supply when servicing the tool.
8. Exposure to vibration may be harmful to hands and arms.
9. Utilize a safety program to provide regular maintenance and inspection of tools and air supply system.
10. Do not defeat, remove, and/or modify safety devices on the tool.
11. Do not make contact with energized electrical lines.
12. Avoid work in hazardous atmospheres where a spark could detonate fumes or ignites flammable liquids.

#### ADDITIONAL SAFETY REGULATIONS:

1. General Industry Safety & Health Regulations, Part 1910, OSHA 2206, available from: Sup't of Documents; Government Printing Office; Washington DC 20402
2. "Safety Code for Portable Air Tools" ANSI B186.1 available from: American National Standard Institute, Inc. 11 W. 42<sup>nd</sup> Str., New York NY 10036
3. State and local regulations.

#### AIR SUPPLY:

1. For best results, 90 psi of clean dry air is recommended. Use 3/8" air hose or larger with fittings of 9/32" minimum I.D. An air line regulator, lubricator and filter mounted as close to the tool as possible is also recommended for efficient performance.
2. Use clean, dry, regulated compressed air at 90PSI. Do not exceed the recommended 90-PSI. Never use oxygen, carbon dioxide, combustible gases, or any other bottled gas as a power source for this tool.
3. Prior to use, the tool requires the attachment of a quick-connector into its air inlet. To do so, wrap approximately 2" of pipe thread sealer tape (not included) around the male threads of a quick-connector then firmly tighten the quick-connector into the air inlet.
4. When connecting to the air supply: Prior to each use if an automatic oiler is not used, add two drops of Air Tool oil (not included) into the air in the tool before performing any maintenance or service.

#### OPERATING INSTRUCTIONS:

1. Use clamps or other practical ways to secure and support the work piece to a stable platform. Holding the work by hand is unstable and may lead to loss of control. Only work on a work piece that is properly secured.
2. Do not force the tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
3. Do not use the power tool if the trigger does not turn it on or off. Any tool that cannot be controlled with the trigger is dangerous and must be replaced.
4. Disconnect the air hose from the tool before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.
5. Store idle tools out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
6. Maintain tools with care. Do not use a damaged tool. Tag damaged tools "Do not use" until repaired.
7. Check for misalignment or binding of moving parts, breakages of parts, damaged air hose (not included), and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using. Poorly maintained tools cause many accidents.
8. Use only accessories that are recommended by the manufacturer for your model tool. Accessories that may be suitable for one tool may become hazardous when used on another tool.
9. Tools should be used in compliance with intended design. Refer to product catalog and ANSI B186.1 AND B-7.1.

10. Operator must always wear personal protective equipment (safety goggles or face shield, hearing protection and gloves) when operating tools. Other protective equipment may be necessary. See additional safety regulations.
11. If tool is making an unusual sound or vibration, stop use immediately and have tool inspected and repaired by an authorized maintenance representative.
12. To start tool, turn sleeve valve indicator to the middle of the operating range. It may be necessary to tap stylus lightly against work surface to start the piston. Once started, adjust sleeve valve to operating speed, this also controls the depth of mark the stylus makes in a surface.
13. While etching, DO NOT use excessive force causing the stylus to dig into work surface. Let the stylus work itself and guide the tool gently. Hold tool at a slight angle for optimal tool performance.
14. While etching, DO NOT use excessive force causing the stylus to dig into work surface. Let the stylus work itself and guide the tool gently. Hold tool at a slight angle for optimal tool performance.
15. This tool can mark material as hard as Rc-64. Excessive force on hard surfaces can break the stylus and result in excessive wear of the tool.
16. To replace the stylus, unscrew cylinder assembly (27) from inlet assembly (7). Invert cylinder sleeve and shake out the stylus (19). Place two new o-rings (9) on the new stylus (19), Place stylus (19) point first back into the cylinder assembly (27) making certain the point pass through the opening of the bushing accessory (14). Carefully screw inlet assembly (7) and cylinder assembly (27) until tight against retaining ring (5).
17. Prior to performing any assembly and/or adjustment procedures, make sure the air supply hose (not included) is disconnected from the tool.
18. Some dust created by power sanding, sawing, grinding and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:  
 Lead from lead-based paints  
 Crystalline silica from bricks, cement and other masonry products  
 Arsenic and chromium from chemically treated lumber

Your risk from exposure varies, depending now how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area, and use approved personal protective equipment such as dust masks that are specially designed to filter out microscopic particles.

**WORK AREA:**

1. Keep your work area clean and well lit. Cluttered benches and dark areas invite accidents.
2. Do not operate pneumatic tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Pneumatic tools create sparks, which may ignite flammables.
3. Keep bystanders, children and pets away while operation a pneumatic tool. Distractions can cause you to lose control. Protect others in the work area from debris such as metal filings and sparks. Provide barriers or shields as needed.

**LUBRICATION:**

1. High-grade air tool oil, which contains a moisture absorbent and rust inhibiting additives, is recommended.
2. Before daily tool use, place approximately 3 drops of recommended oil into air inlet. When the tool is used continually in production work, an airline lubricator and filter is recommended, to assure adequate and constant lubrication.

**TROUBLE SHOOTING FOR LOSS OF POWER**

1. Check air supply. Loss of power may be caused by decreased compressor output, too much drain on air supply, incorrect hose size or poor connections.
2. Dirty or wet air supply. Dirt in the air supply will damage tool. Wet air can rinse lubricant from tool and cause rust corrosion.
3. Check lubrication. The tool should be lubricated a minimum of every eight hours of use following lubrication instructions above.
4. Always disconnect the tool from its compressed air supply source, and squeeze the trigger to release all compressed air in the tool before performing any maintenance or services.
5. Mechanical parts of tool need to be checked periodically. Pay close attention to the o-rings for wear and inspect the piston for wear and free movement in the casing assembly. Tool must be returned to an authorized representative for extensive repairs.

**SAVE THIS MANUAL:**

The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and cautions are factors, which cannot be built into the product, but must be supplied by the operator.

You will need this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures, parts list and assembly diagram. Keep this manual and invoice in a safe and dry place for future reference.